LCE
Machines & Outils

GROUPE SEFMAT

RIPACK®

NOTICE DE MONTAGE
ASSEMBLY INSTRUCTIONS

932 +



NON FOURNI
NOT SUPPLIED


4		
5		
8		
10		x2
13		
19		


LA PROTECTION
PAR EXCELLENCE


ENREGISTREZ VOTRE PRODUIT
CONTRAT DE GARANTIE EN LIGNE

RIPACK.COM/ENREGISTRER-UN-PRODUIT

LCE
Machines & Outils

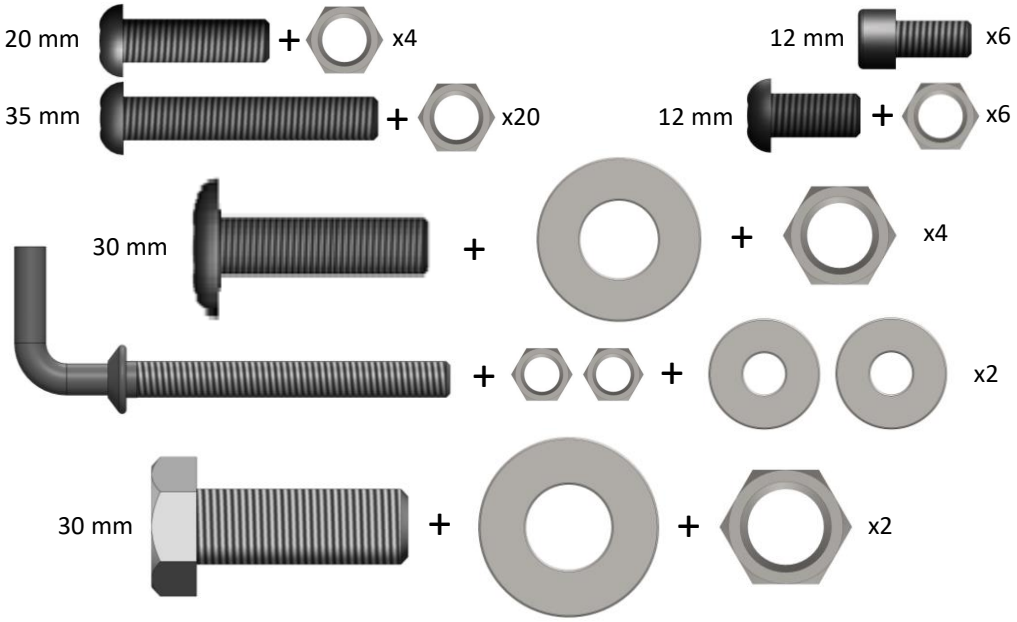

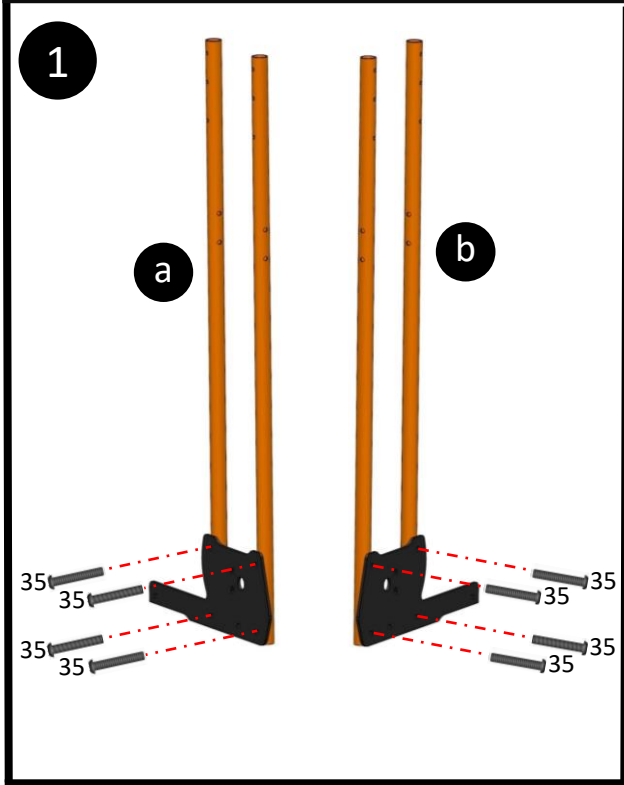

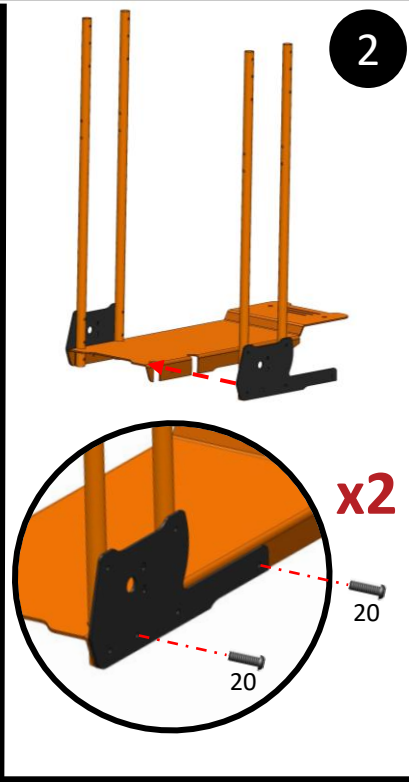

LCE
Machines & Outils

3

a

b



c

x2

M12
40 mm


4

35
35
35


35
35
35




5

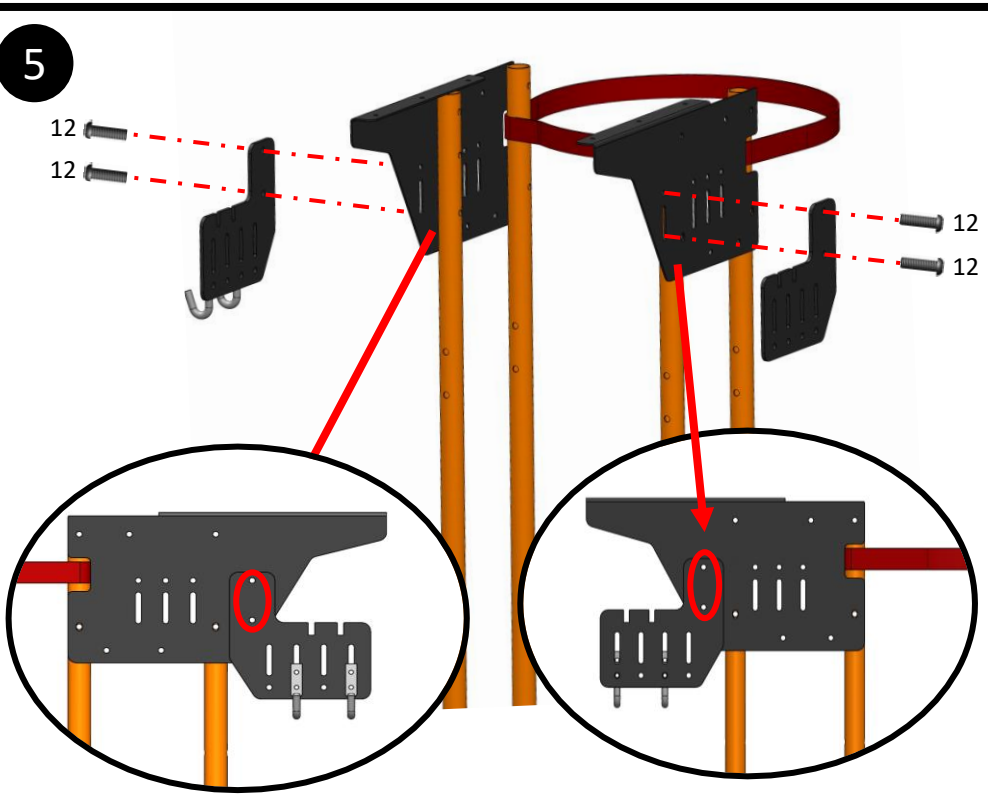

6

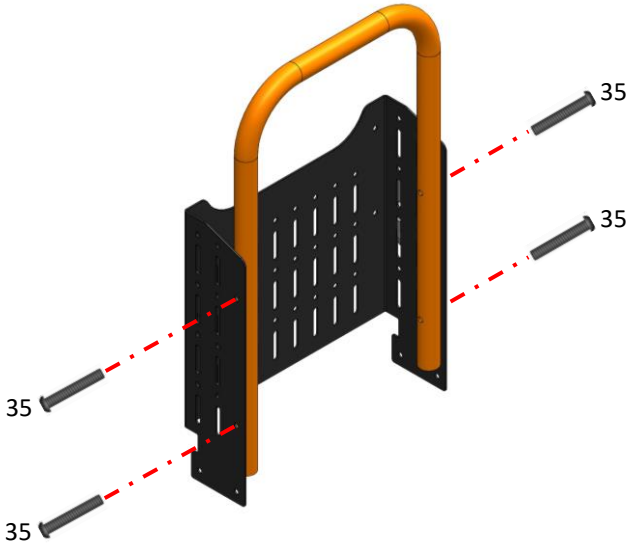


7

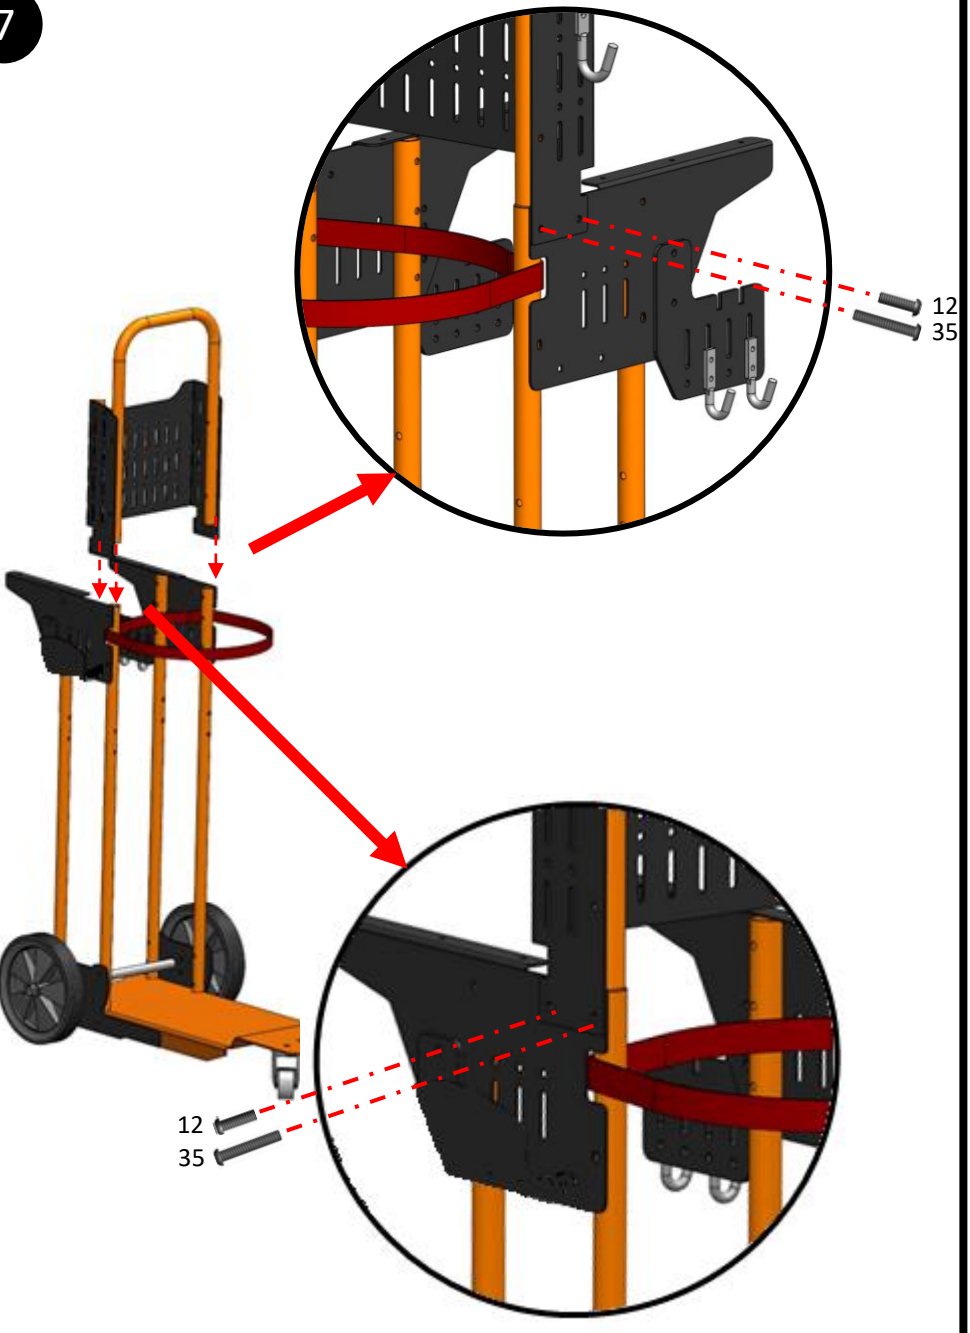


8

x6


10

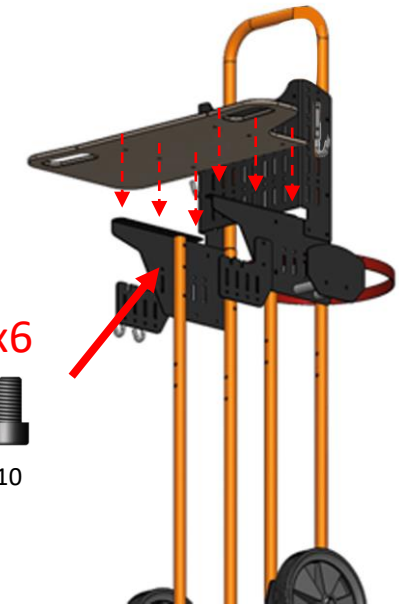


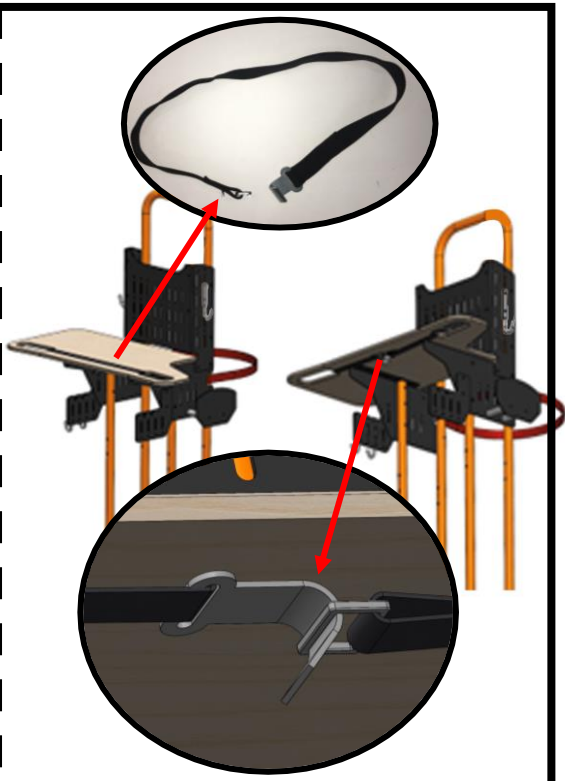


9



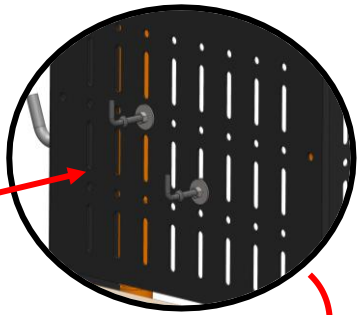

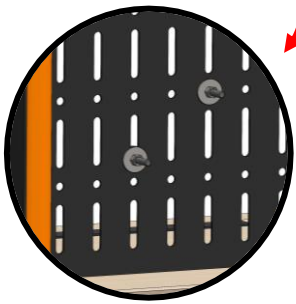

10

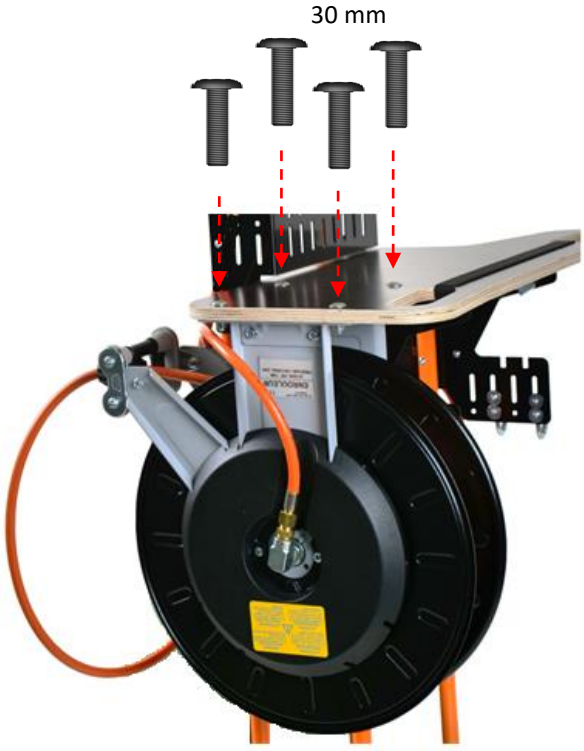

Veuillez-vous référer aux réglementations applicables dans le pays d'utilisation concernant la conformité et l'emploi des produits et accessoires proposés dans notre gamme Ripack ®. L'utilisation des accessoires, connections et pièces détachées Ripack ® sont indispensable au bon fonctionnement et garantie de nos produits ainsi à la sécurité des biens et personnes.

Avant le premier raccordement, les tuyaux doivent être nettoyés par soufflage. Pour le soufflage, il convient d'utiliser de l'air ou de l'azote. Si de l'azote est utilisé, il doit être évacué sans risque vers l'extérieur.

Please refer to the regulations applicable in the country of use concerning the conformity and use of the products and accessories offered in our Ripack ® range. The use of Ripack ® accessories, connections and spare parts is essential for the correct operation and guarantee of our products and for the safety of people and property.

Before the first connection, the hoses must be cleaned by blowing. Air or nitrogen should be used for blowing. If nitrogen is used, it must be vented safely to the outside.


RIPACK
RIPACK